ENGLISH	5
---------	---

SUMMARY

	MDStarter OPERATING MANUAL	5
1.1	Glossary	5
1.2	Login	6
1.3	Welcome	7
1.4	Activity Selection	8
1.5	Installation Components	11
1.6	Installation Instructions	12
1.7	Requirements' Check	13
1.8	Configuration	14
1.9	Installation Report	18
1.10	Installation Conclusion	20
1.11	Update	24
1.12	2 Settings	27
1.1	2.1 Communication Port	27
1.1	2.2 Local Database	28
1.1	2.3 Other Settings	28

TMDSTARTER OPERATING MANUAL

1 TMDStarter OPERATING MANUAL

This manual describes the functioning of the TMDStarter software, required to install TEXA products like TMD2 and TMF.

1.1 Glossary

Installation activity: it indicates which status the installation process of a TMD2 device has reached.

If an installation activity has been launched, it is impossible to send a configuration to the device.

Installation procedure: it consists of a series of operations guided internally by the TMDStarter software.

It must not be confused with the physical installation that consists only in positioning the TMD2 device and the electric connection to the vehicle.

Tool list: a list that contains the details of the devices and of the accessories provided in the order.

Vehicle card: it contains information that is necessary for the functioning of TMD2 technology, such as the license plate or others.

Installer: the person that carries out the installation.

Installation check report: it is a document that indicates the installation features and the test results other than the data regarding the vehicle and the installer.

1.2 Login

On this screen you may authenticate the software's user and keep unauthorized personnel from accessing the data regarding the installations.

You must login each time you launch the software.

The first login must be performed with a PC connected to Internet.

Proceed as follows:

- 1. Input the **Username** in the specific field.
- 2. Input the Password in the specific field.
- 3. Click Login.




The software also signals to the user the status of the connection to the server through a LED:

- Green LED: Connection to the server available.
- Yellow LED: Server availability check.
- Red LED: Connection to the server not available.

1.3 Welcome

This screen displays an introduction of the software for the user. Proceed as follows:

- 1. Read the instructions that appear on the screen.
- 2. Click Next.

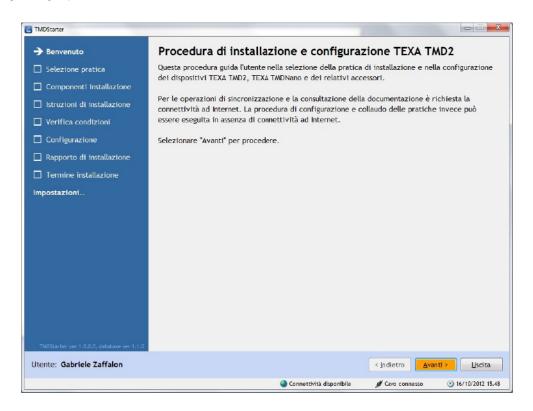

1.4 Activity Selection

On this screen you may select the activity you wish to process.

The activities may assume the following states:

- Open: it is the status the activity acquires when it is downloaded from TMDStarter and available to be handled by the user.
- 2. **Completed:** it is the status the activity reaches when all the installation operations and tests are successfully completed.
- 3. **Closed:** it is the status the activity reaches when the data is synchronised with the server.

Proceed as follows:

You must perform the synchronisation procedure when you launch the software the first time.

The suggested ways to operate within the workshop are the following:

At the beginning of the day, the operator performs the synchronisation to download the activities and to update the data available from TEXA.

After, the connection may be disabled in order to guarantee more autonomy to the processing devices (for ex.: notebook) or to reach areas that do not have connections to Internet.

At the end of the day, the operator reconnects and performs another synchronisation to close all the completed activities.


The first synchronisation may last a few minutes.

1. Click Synchronise.


Wait for the synchronisation procedure to come to an end.



2. Click Ok.

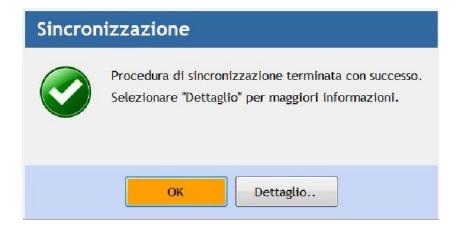


The activities are displayed.

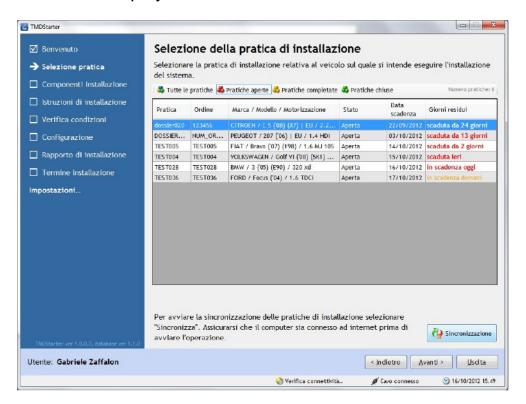

You may view the activities the following ways:

- All the activities: all the activities are displayed.
- Open activities: Only the open activities are displayed.
- Completed activities: only the completed activities are displayed.
- Closed activities: only the closed activities are displayed.


- 3. Select the desired activity.
- 4. Click Next.

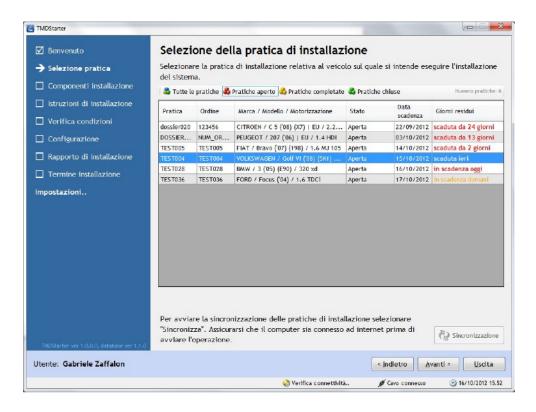

1.5 Installation Components

This screen displays the devises that are needed for the installation. Proceed as follows:

- 1. Read the instructions that appear on the screen carefully.
- 2. Click Next.

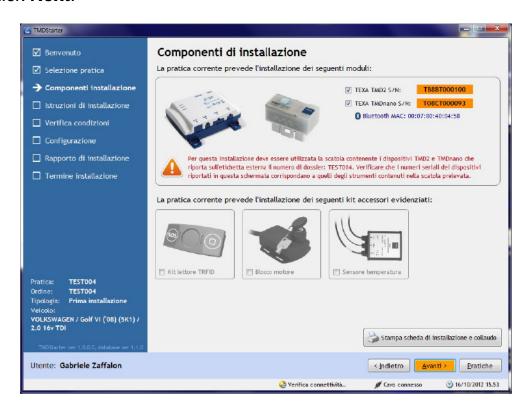


1.6 Installation Instructions

On this screen you may view or print the documentation regarding the installation of the components.

You may access TEXA's on-line documentation (an Internet connection is required).

Proceed as follows:

1. Click on the desired icon.

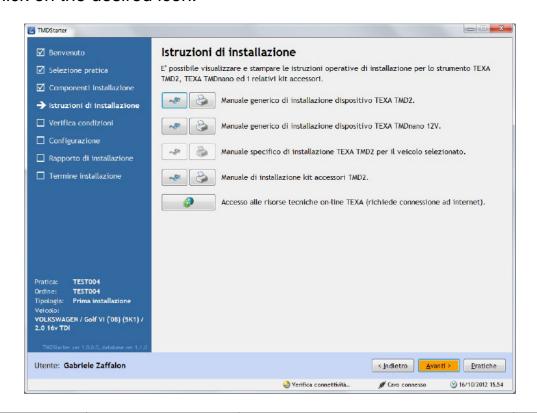

Icon	Name	Description	Notes
~%	View	It allows you to view the related document.	
	Print	It allows you to print the related document.	
	Access the Portal	It allows you to access TEXA's portal that contains the documentation	

2. Click Next.

1.7 Requirements' Check

This screen displays the operations that must be performed necessarily before the configuration.

Proceed as follows:

- 1. Follow the instructions that appear on the screen.
- 2. Click Next.




1.8 Configuration

On this screen you may launch a check of the entire system.

Proceed as follows:

1. Click Next.

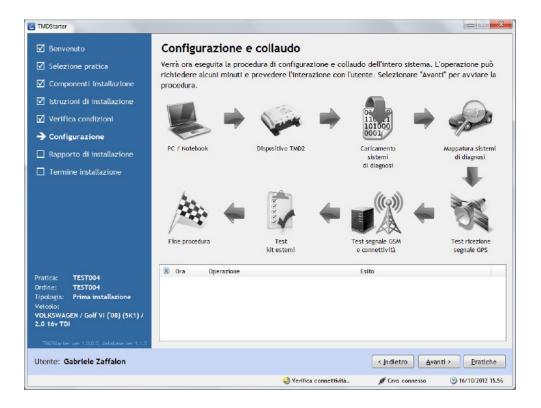

- 2. Follow the instructions that appear on the screen.
- 3. Click Confirm.




- 4. Follow the instructions that appear on the screen.
- 5. Click Confirm.



6. Select the TMD2 installation angle.

For installation angle, we mean how TMD2 is orientated in respect to the vehicle.

7. Click Next.

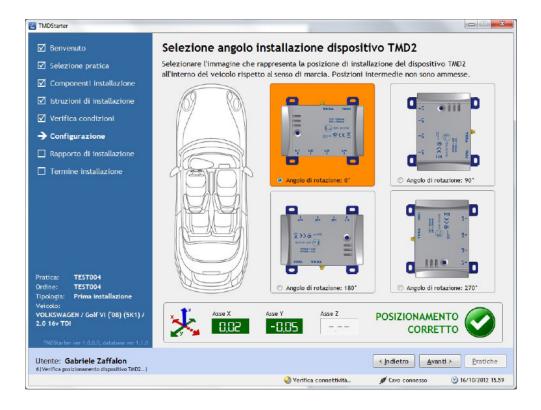

Wait for the test to come to an end.



- 8. Follow the instructions that appear on the screen.
- 9. Click Confirm.



- 10. Follow the instructions that appear on the screen.
- 11. Click Proceed.



The configuration procedure is complete.

12. Click Proceed.



13. Click Confirm.



The procedure is complete.


1.9 Installation Report

On this screen you may input the data of the vehicle on which TMD2 is installed.

Proceed as follows:

- 1. Input the **VIN** in the specific field.
- 2. Input the **License plate** in the specific field.
- 3. Input the **Odometer** in the specific field.
- 4. Indicate the position of TMD2 and of the GPS antenna.


You may also input some notes regarding the check and the description of the installation you performed.

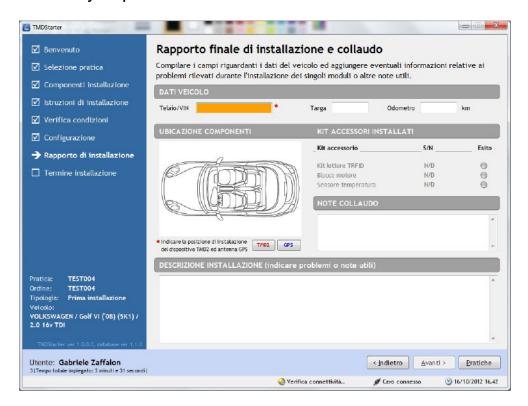


6. Click Next.

The fields marked with the * red symbol are mandatory.

The icon **Next** cannot be clicked until all the mandatory fields are filled out with adequate information (for ex.: the VIN must be made up of 17 characters).

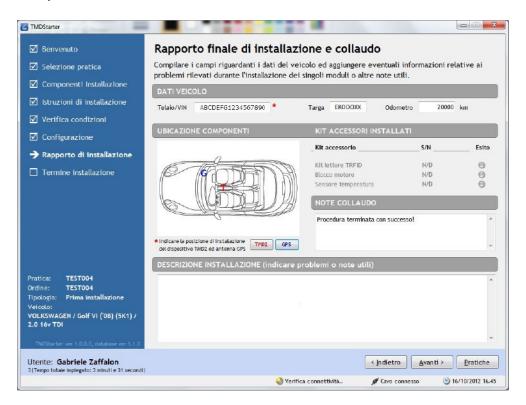

- 7. Read the instructions that appear on the screen carefully.
- 8. Click Confirm.

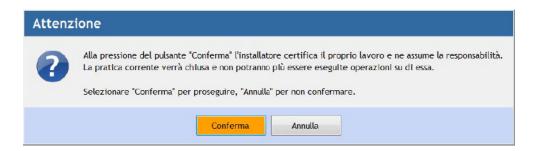

1.10 Installation Conclusion

This screen informs that the procedure is complete and allows the user to:


- · print the installation and check report,
- synchronise the activity.

PRINT INSTALLATION AND CHECK REPORT


This function allows you to print a report with all the information inputted while installing TMD2.

Proceed as follows:

1. Click Print installation and check report.

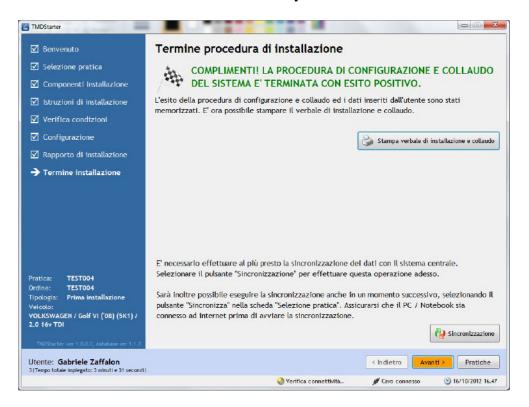

The report is printed.

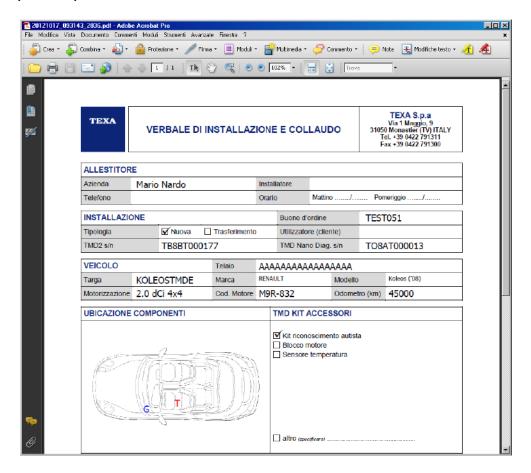


SYNCHRONISATION


This function allows you to synchronise all the activities and, in particular, to close all the completed activities.

Proceed as follows:


1. Click Synchronisation.

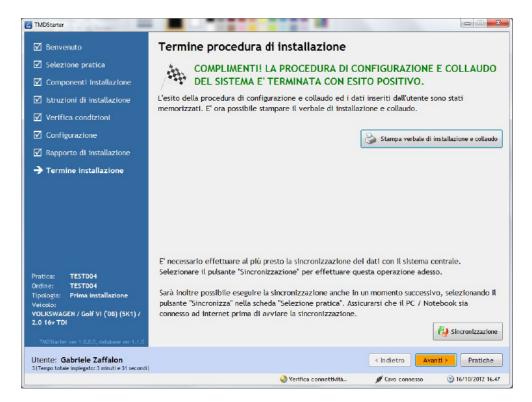

Wait for the synchronisation to come to an end.

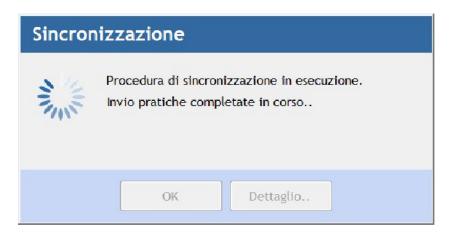

2. Click **Ok**.

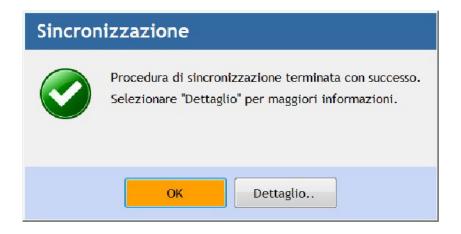

1.11 Update

The software warns the user that there is a new version available.

This screen is displayed after the synchronisation.

We highly recommend you carry out the update when requested.

Proceed as follows:

- 1. Read the instructions that appear on the screen carefully.
- 2. Click **Update**.

We recommend that you always update the software with its last available version.

If you click **Continue**, you will not be able to use all the software's functions.




The portal of TEXA in which you may download the new version is displayed.

3. Click 🍑.



The software installation screen is displayed.

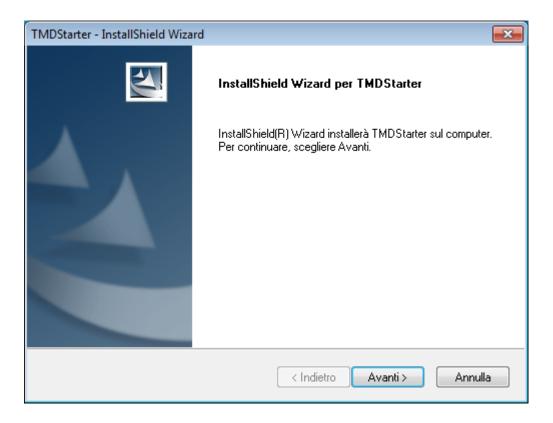

4. Click **Next** and complete the installation procedure.

For more information consult the software SETUP manual.


1.12 Settings

This function allows you to edit the software's settings.

Proceed as follows:

1. Click Settings.

The software settings screen is displayed.

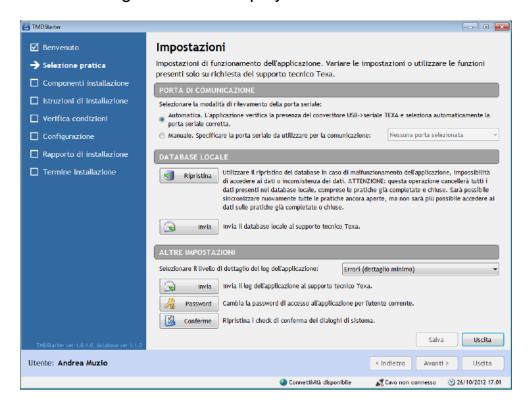

The setting screen is divided into three sections:

- Communication port.
- Local database.
- Other settings.

1.12.1 Communication Port

This function allows you to choose the selection mode of the serial port to which TEXA's serial cable / USB is connected to.

The selection modes are:

- Automatic: the software detects and automatically sets the serial port to which TEXA's serial cable / USB is connected to.
- Manual: the user manually sets the serial port.

1.12.2 Local Database

This function allows you to restore or send the local database within the PC to TEXA's Technical Support.

The function is useful when the database is corrupted or damaged.

Name	Description	Notes
	It allows you to restore the database in case of malfunctions.	
Send	It allows you to send the local database to TEXA's Technical Support.	

Use these functions only if recommended by TEXA's Technical Support.

1.12.3 Other Settings

In this section you will find all the other settings:

Name	Description	Notes
Send	It allows you to send the logs to TEXA's Technical Support.	
Password	It allows you to change the access password.	
Confirmations	It allows you to restore the checks of the system communications.	

Use these functions only if recommended by TEXA's Technical Support.

It also allows you to choose the level of detail of the logs created by the software.

The levels are the following:

- None (log deactivated).
- Errors (minimum detail).
- Errors + Warnings (average detail).
- Errors + Warnings + Notifications (high detail).
- Errors + Warnings + Notifications + Debug (assistance mode).